

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

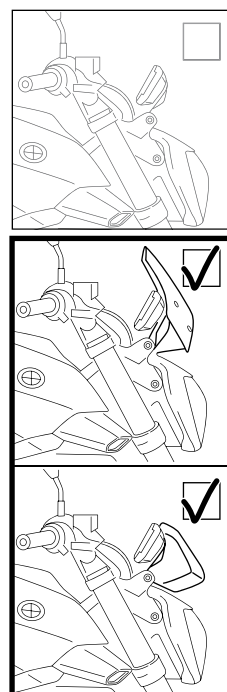
info@puig.tv - info@puigusa.com

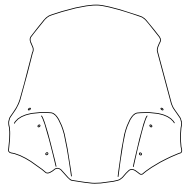








www.puig.tv - www.puigusa.com

**Ref.: 8165**

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

### CARENABRÍS TOURING ADAPTABLE A - TOURING WINDSHIELD FOR - WINDSCHUTZSCHEIBE TOURING FÜR BMW R1200R '15 -



ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.
1		Carenabrís Touring	Touring windshield	1
2		Soporte metálico derecho	Right metal support	1
3		Soporte metálico izquierdo	Left metal support	1
4		Casquillo metálico Ø int. 8,5 x Ø ext. 14x12 mm	Ø inner 8,5 x Ø outer 14x12 mm arrowhead	2
5		Tornillo Allen DIN 912 M8x45 (negro)	DIN 912 M8x45 (black) Allen screw	2
6		Arandela de goma M5x4	M5x4 rubber washer	4
7		Silentblock M5	M5 Silentblock	2
8		Arandela de nylon M5x0,5	M5x0,5 nylon washer	6
9		Tornillo Allen M5x16 ISO 7380 (negro)	M5x16 ISO 7380 (black) Allen screw	6

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com

www.puig.tv - www.puigusa.com

## INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

### CARENABRÍS TOURING ADAPTABLE A - TOURING WINDSHIELD FOR - WINDSCHUTZSCHEIBE TOURING FÜR BMW R1200R '15 -

